

Technical Paper

Multi Address Appearance (MAA) On OpenStage

Issue 1.0

Siemens Enterprise Communications GmbH & Co KG
Munich, 07/26/2010
Germany

Communication for the open minded

Siemens Enterprise Communications
www.siemens-enterprise.com/open

SIEMENS

Disclaimer

This document contains information on multiple address appearance on OpenStage phone. It raises no claims to completeness.

Disambiguation

This document describes Multiple Address Appearance (MAA) for OpenStage@Asterisk. The Telecommunication Industry Association (TIA) has defined terms for VoIP telephony features [1] which slightly differ from the Siemens Enterprise Communications (SEN) wording. This has historical reasons. As SEN uses the terms consistently in every kind of documentation, this document will also use the SEN wording. The following terms are affected:

- Multiple Address Appearance (MAA)
- Multiple Line Appearance (MLA)
- Multiple Station Appearance (MSA)

The following table gives an overview about the differences:

Term (SEN)	Meaning	Term (TIA)
MAA/ MLA Private line type	The Multiple Address Appearance feature, also commonly known as "Multiple Line Appearance", provides the served user with multiple addresses appearing on a single telephone. The served user has the ability to originate, receive and otherwise control calls on each of these address appearances. These address appearances behave independently of each other.	MAA/ Keyset
MSA Shared line type	Multiple Station Appearance provides the ability for the same address (e.g. telephone number, DNS name, URL) to appear on multiple telephones. Users at each telephone may be provided with the ability to make, answer, share and otherwise manipulate calls on the affected telephones.	MLA/ MSA

The main difference is the usage of the term "Multiple Line Appearance"; SEN uses MLA for MSA too, whereas TIA uses MLA together with MAA.

MAA denotes Multiline Appearance with private lines only.
MSA denotes Multiline Appearance with shared lines.

This document uses MLA as a synonym for MSA. Keyset is a synonym for MAA

Contents

Disclaimer	2
Disambiguation	2
Contents	4
Scope	5
Functional Overview	7
Motivation	7
User Experience	8
Basic Representation	8
Making Calls with multiple lines	10
LED Status Overview	14
User Configuration Items	15
Administrative Options	17
General Keypad Options	17
FPK line key programming	20
Limitations	23
References	23
Abbreviations	23

Scope

This document specifies the Multiple Address Appearance (MAA) interface between an OpenStage SIP phone and a SIP based communication server like Asterisk and describes the configuration.

A line is identified by an AoR resp. SIP URI and typically corresponds to a user. A line can appear on one or multiple clients; in SIP terms, Multiple Line Appearance (MLA) means that each client registers as a contact for the AoR concerned. A line that appears on multiple clients is known as a shared line. The representation of a line on a given client is known as an appearance. The appearance at that client which is normally used by the user associated with the line is known as the primary appearance, and appearances at other clients are known as secondary appearances. Figure 1 shows an example of a shared line with multiple appearances.

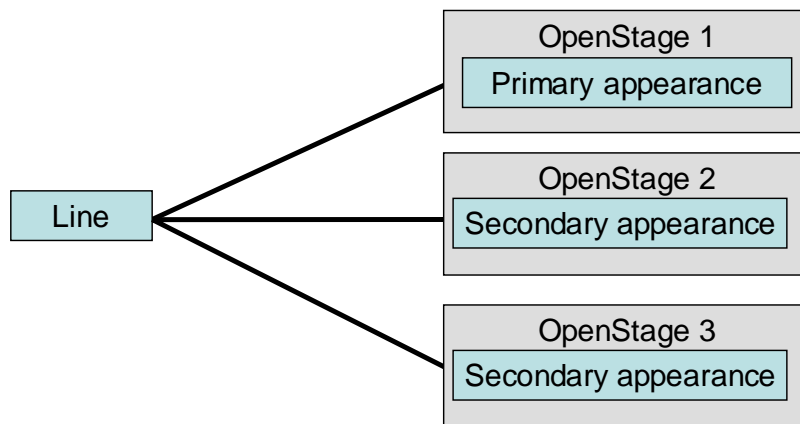


Figure 1: A shared line with multiple line appearances

A given client that is configured as a keyset can support multiple lines, also called Multiple Address Appearance (MAA). The client will have a single appearance for each line it supports. From the client's point of view, a primary appearance of a line is known as a primary line and a secondary appearance of a line is known as a secondary line. At present, the following restrictions apply for OpenStage SIP phones:

- Each client must have one and only one primary line;
- A client must not have more than one appearance of the same line.

Figure 2 shows an example for an OpenStage phone with three addresses configured. Line 1 is the primary line, all other lines are secondary lines.

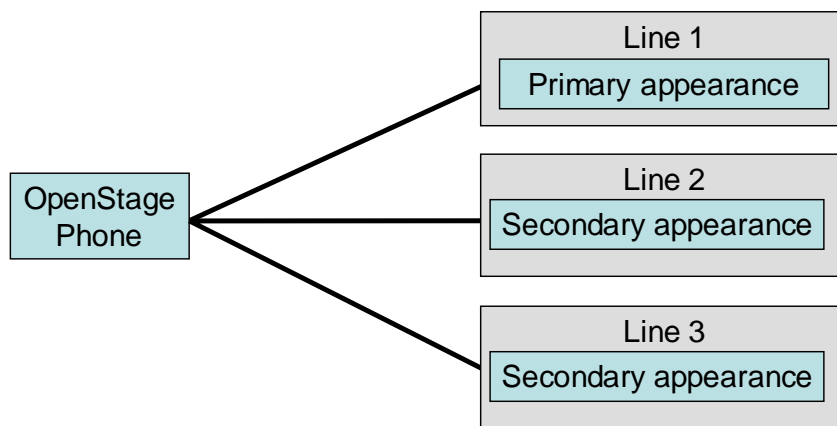


Figure 2: A phone with multiple address appearance

A client configured as a keyset need not have any secondary lines; in that case, it has only a single line (the primary line). A client can be configured with a private line that is not shared, i.e., the line has only a single appearance. For the purposes of this specification, the fact that a client is configured with more than one line or is configured with a single line that is a shared line makes the client a keyset, as opposed to an ordinary single user phone.

NOTE

1. A client could be configured with only a single line, that line being a private line. A client configured in this way would not make use of any of the special keyset signalling capabilities defined in this specification. However, the client's the user interface and parts of the configuration may differ from a single line non-keyset device.
2. The Asterisk communication system does not support the OpenStage shared multiline signalling features, and SEN will not provide any support to this proprietary protocol enhancement. Therefore, only the configuration of private lines is taken into account, and this document is restricted to MAA only.

Functional Overview

Motivation

A telephone is normally associated with a directory number, or in general, with SIP: an AoR. This number is used for placing calls to this telephone and for displaying the telephone's, resp. user's identity when placing calls to another party. This number is also used when more than one call appearance is supported due to additional features, like call waiting.

A keyset is a telephone that is associated with more than one number - this allows a given telephone to act on behalf of different phone numbers, or users. Just like with traditional telephony systems, people sometimes refer to lines instead of numbers, hence keyset phones are also referred to as multiline phones. The main line, i.e. the line/directory number for the user associated with a given physical telephone, is called primary line, whereas all other lines that can be handled on other phones are called secondary lines. Call Log and MWI are working for the primary line only and not for secondary lines. Sharing of lines is possible, but, as mentioned before, this is not in the focus of this document.

At any given time, one telephone can handle only one call appearance for connecting to the handset, and the same applies to keyset / multiline telephones. Also for keyset telephones, features like call waiting can increase the number of call appearances that can be handled, but on a keyset telephone, these appearances may refer to different lines / numbers / users. The programmable feature keys are used for handling the lines and their respective call appearances, supported by the associated LEDs reflecting the line/call status. The number of lines that can be configured depends on the phone model.

This feature can be used for the following use cases, amongst others:

- Address multiple users at one phone
- Enhanced Call Hold Scenarios
- Allow more than two incoming calls at one phone

This feature can not be used for the following use cases, amongst others:

- MLA. If the line is configured at more than one phone, incoming calls are sent to the last registered device.
- Line status observation. If the same line is configured at more than one phone, the line status is not presented at these phones.

Depending on the selected system, a specific set of additional features for handling call appearances is available (e.g. placing calls on hold).

Similar features are named Bridged Line Appearance (BLA) and Shared Call Appearance (SCA).

User Experience

MAA is automatically activated if the phone has line keys configured, thus the phone works as MAA phone 'out of the box'. Line key administration is done by the administrator; the user has no influence on these settings. Depending on the settings, the phone will react slightly different in basic user interactions. This document will outline these differences.

Even if only one line key is configured, the phone changes into line presentation mode. The line presentation mode helps the user to keep track of the different line statuses. On an OpenStage 60/80 phone, up to 30 lines can be configured, whereas OpenStage 15/20/40 phones are limited to 18 lines.

Basic Representation

If an OpenStage phone is configured as MAA phone, the basic appearance is changed. A new line is introduced into the idle screen; it is represented in line overview mode. The "My Phone" tab shows the status of the primary line, while the "Overview" tab displays the current statuses of all lines/users managed on the phone. If a line is used, an additional tab is provided for this line.

A single user line is always represented by an FPK. The FPK label corresponds to the line overview entry and the line overview tab name; the FPK LED status corresponds to the icon displayed in the line overview tab.

The user can change between the different tabs using the phone home key or the 'left arrow' key.


Multiple address representation is adapted to the availability of phone resources. Although the phone is able to manage phone calls for many users, it still has only one audio input and output device, storage for only one call log, and only one MWI button/LED.

Therefore, one line is privileged. This line, called primary line, is bound to the local call log and to the MWI. In idle state, the primary line has a line overview screen of its own called "My Phone". It contains information about missed calls and messages waiting. On each MAA phone, one and only one primary line must be defined. All other user lines are secondary lines; they are treated equally among each other.

The example pictures used in this document are all using the same configuration:

Label	Number	Line Type
User 204	204	Primary line
User 333	333	Secondary line
User 444	444	Secondary line
User 555	555	Secondary line

MWI and call log are used for user 204, which is the primary line

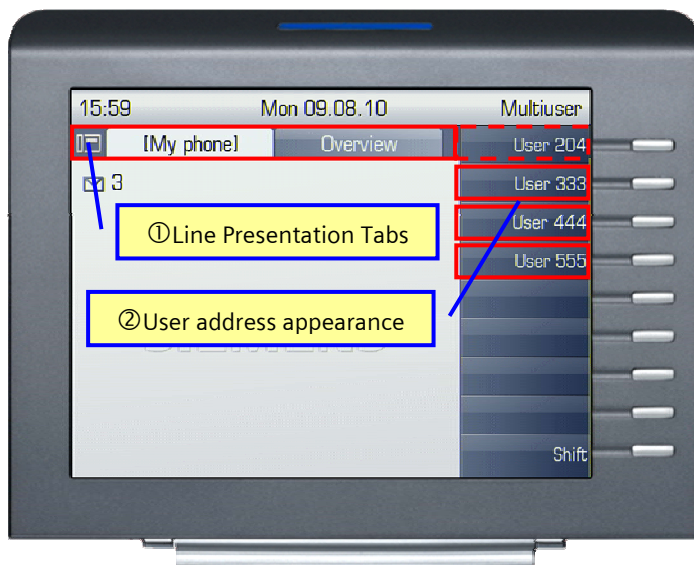

OpenStage Idle Screen for MAA

The idle screen contains the additional line management row. For navigation between the tabs, the phone mode key or the left arrow key on the TouchGuide can be used. The lines are represented by the FPKs on the right hand side starting with the primary line key on top.



Line Overview

The line overview tab shows the current status of the managed lines. The icon on the left indicates the status (e.g. idle, hold, talk). The line label is displayed on the right hand side of the icon.



Line Management Navigation

The user has two possibilities to navigate between the tabs in the line tab navigation:


- Press the phone mode key to toggle between the different tabs
- Press the 'left' error key to navigate between the different tabs.

The OpenStage 40 does not have a home mode key. Therefore, the left arrow key must be used for navigation.

Making Calls with Multiple Lines

Incoming Call

Incoming calls are notified as known from a single user phone. Additional information about the affected line is shown in the incoming call popup and the line FPK LED. The user can pick up the call using the standard mechanism; additionally, the line key can be used to pick up the call by a single press. Please note that two key presses are needed in case the key is configured to **'Preselect mode'** (for details, please refer to [3]).

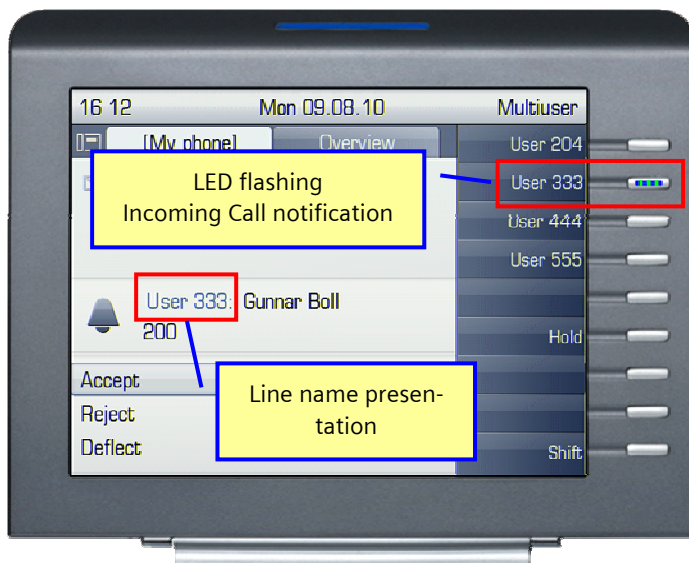

Incoming Call Presentation:
The phone notifies the user depending on the administrative setting for this line. The line may ring, as known from a standard single user phone. Additionally, the incoming call popup shows the line name. The line FPK LED is flashing.

The phone's behaviour for multiple incoming calls depends on the administrative setting. See **'Terminating line preference'** for seizing lines.

Making calls

In a single user scenario, the phone will always use the configured user number to make an outgoing call. In a multi user scenario, the phone must know which call number should be used, as the appropriate line must be seized. Line seizure can be done manually or automatically. The phone's behaviour depends on the administrative configuration. See **'Originating line preference'** for more details.

Use cases for manual line seizure:

1. Standard procedure
 - a. User picks up the handset.
 - b. Phone asks to select the outgoing line.
 - c. User presses the line key.
 - d. Outgoing call popup is shown.
 - e. User dials the number.
2. Line key seizure
 - a. User presses the line key.
 - b. Outgoing call popup is shown.
 - c. User dials the number.
3. Using Line Overview
 - a. User goes to line overview tab.
 - b. User selects one line for the outgoing call by pressing the 'OK' button or the context menu.
 - c. Outgoing call popup is shown.

- d. User dials the number.

The administrator can configure the phone so that it selects the outgoing line automatically when the user initiates an outgoing call. The following options are available:

1. **Idle line**
The phone will use the next available idle line, according to the configured order of precedence. For each line, a priority is defined. The phone will use this order to select the outgoing line.
2. **Primary**
The phone will use the primary line to set up the outgoing call. If the primary line is blocked, the phone will show a reminder popup stating that no outgoing line is available.
3. **last**
The phone will use that line which had been used for the previous in- or outgoing call. If this line is already in use, the phone will show a reminder popup stating that no outgoing line is available.
4. **none**
This setting is used to enable manual seizure. The user is asked to select the outgoing line.

Dialing the Last Dialed Number

The last dialed number is displayed in the outgoing call popup. The number shown in this popup is always the number that has been dialed last number from the primary line. Calls made with secondary lines are not recorded in the call log and not presented as last dialed number.

Call Forwarding

Call forwarding can only be activated for the primary line. If call forwarding shall be performed for secondary lines, a central switch feature must be activated. This can be done via the stimulus feature key.

Putting a Line on Hold

An existing call can be put on hold. In addition to the standard mechanism, the line key can be used to put the call for this line on hold, if the administrator has set the '**Line action mode**' parameter accordingly. A flashing LED is indicating the held call. If the line key is pressed again, the held call will be retrieved.


Remark: The call status per line is also displayed on the line overview screen.

Warning: As opposed to a single user phone, the held call is not shown on the phone screen. This might confuse a user which is accustomed to the behaviour of a single user phone.

In a MAA scenario, a held call releases the phone's audio resources so it can be used to make calls from other lines. Therefore, the phone switches back to idle screen when the user puts a call on hold. The flashing line led and the line overview are the only indications that a call is on hold. The phone will not remind the user after some time that a call is still on hold; this feature is for single user phones only.

Resource Handling

The phone has local resources for two concurrent calls. If the resources are exhausted, no further call can be set up, and the phone will deny any further requests. Here is an example for a three way conference.

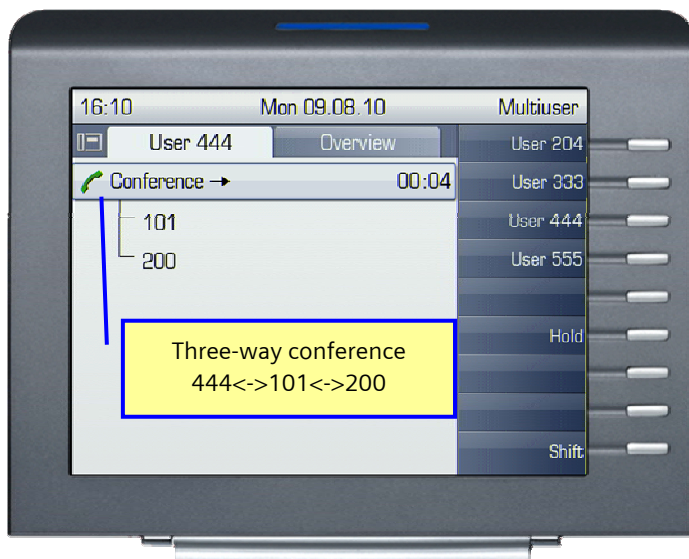

Conference View for 444

User 444 has set up a 3-way conference between 444, 101 and 200.



Context View for 444

The phone offers no option to add an additional participant to the conference as the maximum number of local conference participants is exceeded.




Context View for 555

The phone blocks any other call attempts from different users until the resources are available again.

User Interface Examples

The following examples give an impression about the powerful line/user handling of the OpenStage phone.


Line Overview Table

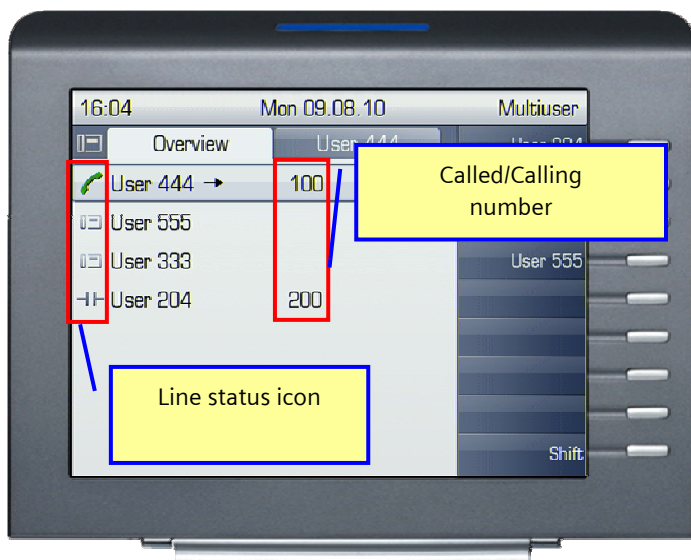

Line Overview Tab

The line overview table gives a quick and easy overview about the status of the configured lines. On the right hand side, the other party is displayed.


Call Options in the Context Menu

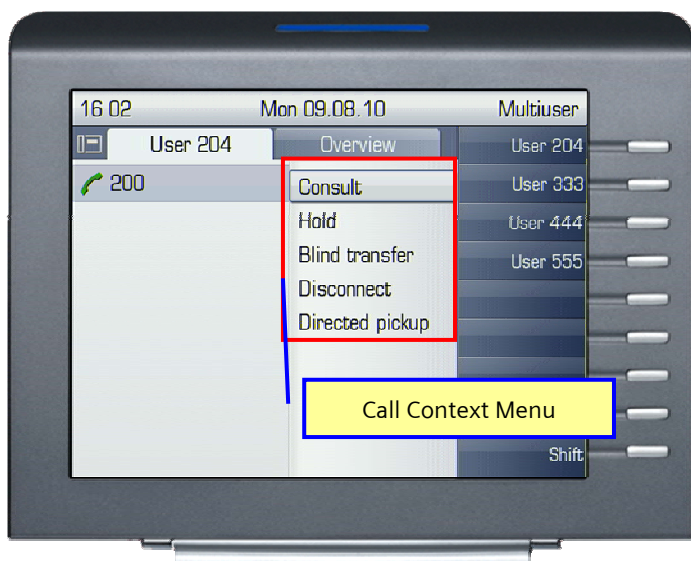

Call Context Menu

The call context menu is always adapted to the current call status of a used line. It is in line with the menu of a single user telephone and presents a set of options available for the current user/line.

Call Options in the Overview Menu

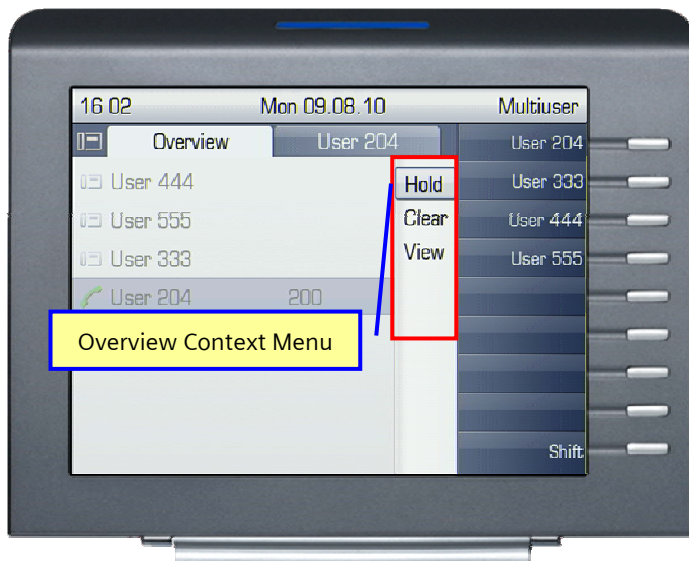




Overview Context Menu

The overview context menu offers a subset of the call context menu. The subset consists of the most commonly used functions within a call and the view option to switch to the call view for this call.

LED Status Overview

The LED shows the current status of the represented line at any time.

LED	Explanation
 User 204	Off The line is in idle mode.
 User 204	Flashing Hold reminder is activated / incoming call on the line.
	Flickering Outgoing call on the line.
	Fast blinking Line is in ringing.
	Blinking Call forward is activated.
 User 204	Illuminated The line is busy.

User Configuration Items


The user can configure the phone behaviour relating to a line and the corresponding overview according to his personal needs.

Line Configuration Menu

The menu can be accessed using the Web Based Management (WBM) or the local user menu at the phone. The location is:

User > Configuration > Keyset > Lines

WPI (see [4]) tags are available for these settings, too.

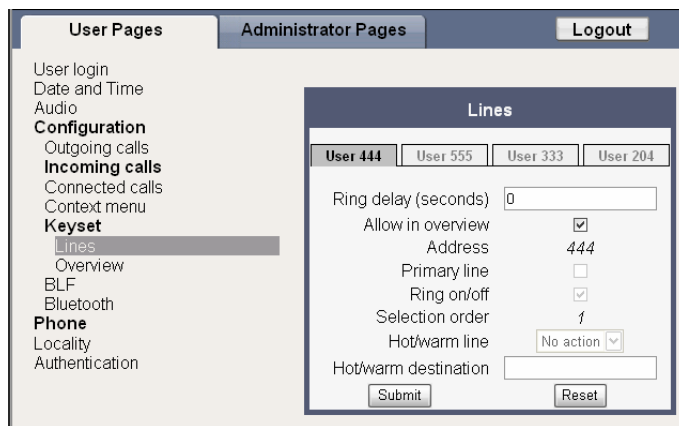

User Line Key Configuration


The keyset line configuration can be done separately for each individual line. Each line has a tab of its own in which the parameters are set.

Parameter	Meaning
Ring delay (seconds)	Number of seconds until the phone will play the ringing tone for an incoming call.
Allow in overview	If checked, the line will be shown in the overview table.
Address	AoR resp. call number for this line (not configurable by the user).
Primary line	Line status (not configurable by the user).
Ring on/off	If checked, a ringer tone is played for incoming calls on this line (not configurable by the user).
Selection order	Used for outgoing calls if idle lines are selected automatically (not configurable by the user).
Hot/warm line	Not used in this context.
Hot/warm destination	Not used in this context.

Overview Configuration Menu

The menu can be reached using the Web Based Management (WBM) or the local user menu at the phone. The location is:

User > Configuration > Keypset > Overview

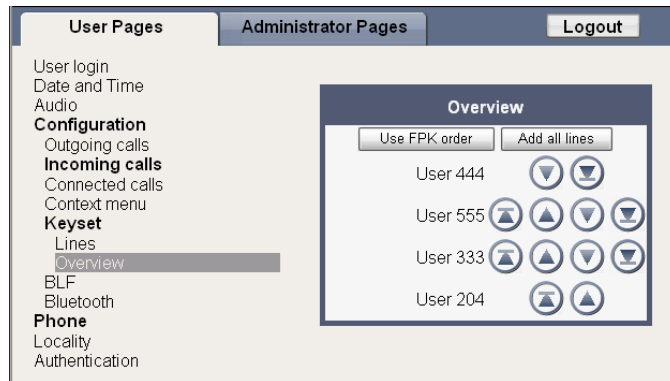

Overview Configuration

The overview screen can be configured by the user.

Parameter	Meaning
Use FPK order	The phone will order the line entries in the overview table according to the order of the corresponding FPKs.
Add all lines	All lines are added to the overview table.
Ordering icons	The icons can be used to order the line entries suitable to the user's needs.

Administrative Options

The MAA (Multiple Address Appearance) is a subset of the SEN proprietary MLA (Multiple Line Appearance). Therefore, some administrative settings are used in both scenarios. The descriptions given here are limited to the settings needed for MAA. Any deviating usage of the parameters will enable MLA, which is only supported by the SEN OpenScape Voice platform.


There are two sets of options:

- A general set of options affecting all types of configured line keys. These options are used when at least one FPK is configured as (primary) line key.
- A set of options per line key. These options specify the behaviour of individual line keys. Thus, each line key can have different settings.

General Keypad Options

WBM Configuration:

Admin > System > Features -> Keypad operation

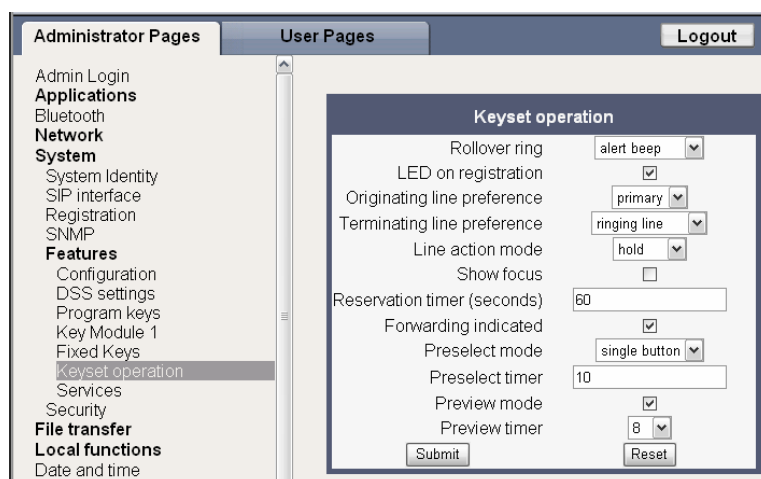

General Keypad Options
The options can be set via WBM, WPI and local phone menu.

The following are common for all keypad lines. The **Rollover ring** setting will be used when a call is active and an incoming call arrives on a different line.

- **no ring**: The phone will not ring on the incoming call.
- **"alert ring"**: A 3 seconds burst of the configured ring tone is activated on the incoming call.
- **"alert beep"**: A beep tone is played on the incoming call, instead of a ring tone. The tone is added to the audio of the call, so if a handset is used, the tone will sound from the handset.
- **"standard ring"**: The default ring tone is activated on the incoming call.

LED on registration determines whether the line LEDs will be lit for a few seconds if they have been registered successfully with the SIP server on phone startup.

The **Originating line preference** parameter determines which line will be used when the user goes off-hook or starts on-hook dialling.

Remark: When a terminating call exists, the terminating line preference takes priority over the originating line preference.

The following preferences can be configured:

- **idle line:** An idle line is selected for originating calls. The selection is based on the hunt ranking parameter assigned to each line in the "Line key configuration" screen. If all available lines are used, a popup is shown indicating that no further line is available.
- **primary:** The designated primary line / main DN is selected for originating calls. If the primary line is already used, a popup is shown indicating that no further line is available, even if other lines are configured and idle. In this case, the user has to manually select the line for the outgoing call.
- **last:** The line selected for originating calls is the line that has been used for the last call (originating or terminating). If the last line is already in use, a popup is shown indicating that no further line is available, even if other lines are configured and idle. In this case, the user has to manually select the line for the outgoing call.
- **none:** To originate a call, the user manually selects a line by pressing its line key. Manual line selection overrides automatic line preferences.

The **Terminating line preference** parameter decides which terminating line, i. e. line with an incoming call, is selected for call accepting when the user goes off-hook.

The following preferences can be configured:

- **ringing line:** The line in the alerting or audible ringing state is automatically selected when the user goes off-hook. If multiple lines are alerting or ringing, that line which has been alerting the longest is selected.
- **ringing PLP:** The line in alerting or audible ringing state is automatically selected when the user goes off-hook. However, if the prime line is alerting, it is given priority.
- **incoming:** The earliest line to start audible ringing is selected, or else the earliest alerting (ringing suppression ignored) line is selected.
- **incoming PLP:** The earliest line to start audible ringing is selected, or else the earliest alerting (ringing suppression ignored) line is selected. However, if the prime line is alerting, it is given priority.
- **none:** To answer a call, the user manually selects a line by pressing its line key before going off-hook, or by pressing the speaker key. Manual line selection overrides automatic line preferences.

Line action mode determines the consequence for an established connection when the line key is pressed. If "hold" is selected, the call currently active is set to hold as soon as the corresponding line key is activated. The user has two options: 1) to reconnect to the remote phone by pressing the line key again, or 2) to initiate another call from a newly selected line. If "release" is selected, the previously established call is ended.

If **Show Focus** is checked, the LED of a line key flutters when the line is in use. If not checked, the line key is lit steadily when the line is in use.

The **Reservation timer** sets the period after which the reservation of a line is cancelled. A line is automatically reserved for the keyset whenever the user has selected a line for an outgoing call and hears a dial tone. If set to 0, the reservation timer is deactivated.

Forward indication activates or deactivates the indication of station forwarding, i. e. the forwarding function of OpenScape Voice. If **Forward indication** is activated and station forwarding is active for the corresponding line, the LED of the line key blinks.

Preselect mode determines the phone's behaviour when a call is active, and another call is ringing. If the parameter is set to "Single button", the user can accept the call a single press on the line key. If it is set to "Preselection", the user must first press the line key to select it and then press it a second time to accept the call. In both cases, the options for a ringing call are presented to the user: "Accept", "Reject", "Deflect".

Preselect timer sets the timeout for an incoming call. After the timeout has expired, the call is no longer available.

With firmware V2, call bridging is available. When **Bridging enabled** is activated, the user may join into an existing call on a shared line by pressing the corresponding line key. On key press, the OpenStage Voice builds a server based conference from the existing call parties and the user. If the call has already been in a server based conference, the user is added to this conference.

Remark: This is a shared line only feature and not relevant for the MAA scenario.

Line Preview

The line preview settings are related to a specific FPK function. This FPK function enables the preview mode, which allows the user to preview a line before using it. When preview mode is active, the line keys behave similar to when the keyset configuration is set to preselection for line keys. On pressing the line key, the call activity on the corresponding line is shown. Unlike with a preselected line, there will be no change to the phone's current line connections. The LED indicates whether line preview is active or not.

The information shown to the user depends on the ring/alert configuration for the line in question. If the line is configured to alert only, the preview will only show the state of the call, not the identity of the call party. If the line is configured to ring, the identity of the call party will be revealed.

The preview mode can be configured as temporary or as permanent. If **System > Features > Keyset operation > Preview mode** is disabled, preview mode will end when the user uses the previewed line, or a new call is started in any other way, or if the focus is changed away from call view. If the parameter is enabled, preview mode remains active until the user cancels it by pressing the key again.

The **Preview timer** parameter determines the time span during which the line preview will remain on the screen.

A dedicated line preview FPK can be administrated.

The menu can be accessed using the Web Based Management (WBM) or the local user menu at the phone. The location is:

System > Features > Program keys > Preview

Data required

- **Rollover ring:** Determines if a ring tone will signal an incoming call while a call is active.
Value range: "No ring", "Alert beep", "Alert ring"
Default: "Alert beep"
- **LED on registration:** Determines if line LEDs will signal SIP registration. Value range: "Yes", "No"
Default: "Yes"
- **Originating line preference:** Selects the line to be used for outgoing calls. Value range: "Idle line", "Primary", "Last", "None"
Default: "Idle line"
- **Terminating line preference:** Determines which line with an incoming call shall be selected for answering.
Value range: "Ringing line", "Incoming", "Incoming PLP", "Ringing PLP", "None"
Default: "Idle line"

- **Line action mode:** Determines the consequence for an established connection when the line key is pressed.
Value range: "Hold", "Release"
Default: "Hold"
- **Show focus:** Determines whether the line key LED blinks or is steady when it is in use.
Value range: "Yes", "No"
Default: "Yes"
- **Reservation timer:** Sets the period in seconds after which a line reservation is cancelled. If set to 0, the reservation timer is deactivated.
Default: 60
- **Forward indication:** Activates or deactivates the indication of station forwarding.
Value range: "Yes", "No"
Default: "No"
- **Preselect mode:** Determines whether an incoming call is accepted by a single press on the corresponding line key or a double press is needed.
Value range: "Single button", "Preselection"
Default: "Single button"
- **Preselect timer:** Sets the timeout in seconds for accepting an incoming call.
- **Bridging enabled (V2):** When set to "Yes", the user is allowed to join a call on a shared line. For this purpose, a server based conference is established. Not relevant for MAA.

FPK line key programming

For configuration via WBM, invoke **System > Features > Program keys** and select **line** in the pulldown menu of the key you want to configure. Next, press **Edit....**

The screenshot shows the WBM configuration interface. On the left is a navigation tree with categories: Administrator Pages, User Pages, and Logout. Under User Pages, the 'Features' section is expanded, and 'Program keys' is selected. The main content area shows the 'Line' configuration for key 204. It includes an information box stating that primary lines are recommended on keys 1 to 6 for compatibility. Below this, various configuration fields are visible: Key label 1 (User 204), Primary line (checked), Ring on/off (checked), Ring delay (0 seconds), Selection order (1), Address (204), Realm (gemeinschaft.local), User Identifier (204), Password (masked), Shared type (private), Allow in overview (checked), Hot warm action (No action), and Hot warm destination. At the bottom are 'Submit' and 'Reset' buttons.

FPK programming: Line key options per FPK.

Remark: It is recommended to configure primary lines only on keys 1 to 6, or 1 to 5, if a shift key is needed. This ensures that the lines are still accessible when the user migrates to a different phone with fewer keys via an optional mobility feature.

A line corresponds to a SIP address of record (AoR), which can have a form similar to an Email address, or can be a phone number. It is defined by the **Address** parameter. For registration of the line, a corresponding entry must exist on the SIP server resp. the SIP registrar server.

A label can be assigned to the line key by setting its **Key label**.

Every keyset must necessarily have a line key for the primary line. To configure the key of the primary line, set **Primary line** to "true". Only one single line can be the primary line. Enabling the primary line option will disable a possibly previous configured primary line.

If **Ring on/off** is checked, the line will ring when an incoming call occurs, and a popup will appear on the display. If the option is not checked, the incoming call will be indicated only by the blinking of the key's LED. If it is desired that the line ring with a delay, the time interval in seconds can be configured by **Ring delay**.

When the user lifts the handset in order to initiate a call, the line to be used is determined by selection rules. To each line, a priority is assigned by the **Selection order** parameter. A line with the rank 1 is the first line to be considered for use. If more than one line have the same rank, the selection is made according to the key number. Note that Selection order is a mandatory setting; it is also relevant to the Terminating line preference, as well as to other functions.

The **Address** (Address of Record) parameter is the phone number resp. SIP name corresponding to the entry in the SIP registrar at which the line is to be registered. The phone will register each line with 'Address@Registrar'.

Remark: For the configuration of line keys, the use of the WPI (Workpoint Interface) is recommended. For operating the WPI, please refer to the WPI developer's guide [4]. Alternatively, the web interface or the local menu can be used. Note that the creation of a new line key and the configuration of some parameters can not be accomplished by the phone's local menu. Generally, it is advisable to restrict the user's possibilities to modify line keys. This can be achieved solely by the WPI. For further instructions, see the WPI developer's guide.

The **Realm**, a protection domain used for authenticated access to the SIP server, works as a name space. Any combination of user id and password is meaningful only within the realm it is assigned to. If the realm is not set by admin, the phone will set it automatically after the first successful registration. The other parameters necessary for authenticated access are **User Identifier** and **Password**. For all three parameters, there must be corresponding entries on the SIP server.

The **Shared type** parameter determines whether the line is a shared line, i. e. shared with other endpoints, or a private line, i. e. available exclusively for this endpoint. A line that is configured as primary line on one phone can be configured as secondary line on other phones. The MAA environment is restricted to private lines. Therefore **the option must be set to 'private' in this case**.

When **Allow in overview** is set to "Yes", the line can be visible in the line overview on the phone's display.

With firmware V2, hot/warm line functionality is available. If a line is configured as hot line, the number indicated in **Hot warm destination** is dialled immediately when the user goes off-hook. This number is configured in the user menu under **Configuration > Keyset > Lines > Hot/warm destination**. To create a hot line, **Hot warm action** must be set to "hot line". If set to "Warm phone", the specified destination number is dialled after a delay which is defined in **System > Features > Configuration > Initial digit timer (seconds)**. During the delay period, it is possible for the user to dial a different number which will be used instead of the hot/warm line destination. In addition, the user will be provided with a dial tone during the delay period. With the setting "No action", the line key will not have hot line or warm line functionality. As the hotline/warmline function is used in special scenarios only, it is generally recommended not to use this option in MAA environments.

Data required

- **Key label <n>:** Set the label of the line key with the key number <n>. Default: "Line"
- **Primary line:** Determines whether the line is the primary line. Value range: "Yes", "No" Default: "No"

- **Ring on/off:** Determines whether the line rings on an incoming call.
Value range: "On", "Off"
Default: "On"
- **Ring delay:** Time interval in seconds after which the line starts ringing on an incoming call.
Default: 0
- **Selection order:** Priority assigned to the line for the selection of an outgoing line.
Default: 0
- **Address:** Address/phone number which has a corresponding entry on the SIP server/registrar.
- **Realm:** Domain wherein user id and password are valid.
- **User Identifier:** User name for authentication with the SIP server.
- **Password:** Password for authentication with the SIP server.
- **Shared type:** Determines whether the line is a shared line (shared by multiple endpoints) or a private line (only available for this endpoint).
Value range: "shared", "private", "unknown".
Default: "shared"
- **Hot/Warm line type:** Determines whether the line is a hot line or a warm line.
Value range: „hot line“, „warm line“
- **Hot/Warm line destination:** Number to be dialled when the phone is in hotline or warmline mode.
- **Allow in Overview:** Determines whether the line appears in the phone's line overview.
Value range: "Yes", "No"
Default: "Yes"
- **Hot warm action (V2):** Determines if the line is a regular line, a hot line, or a warm line.
Value range: "No action", "hot line", "warm line"
- **Hot warm destination (V2):** The destination to be dialled from the hot/warm line when the user goes off-hook.

Remark: A new line key can only be added by use of the WBM or, preferably, using the WPI [4]. Once a line key exists, it can also be configured by the local menu.

Limitations

When OpenStage is configured as a keyset device with multiple lines, then uaCSTA services can only be applied to the primary line of the OpenStage device, and secondary lines cannot be controlled using the uaCSTA interface.

When invoking call related services (e.g. AnswerCall) and physical devices services (e.g. SetMicrophoneMute), it is the OpenStage device which decides which call or speaker the service request is applied to.

References

- [1] TIA-811-A: Performance and Interoperability Requirements for Voice-over-IP (VoIP) Feature Telephones (<http://www.tiaonline.org/standards/technology/voip/documents/TIA-811-A-final-for-global.pdf>)
- [2] Session Initiation Protocol (SIP)-Specific Event Notification ([RFC 3261](https://tools.ietf.org/html/rfc3261))
- [3] OpenStage Admin Guide (http://wiki.siemens-enterprise.com/images/1/1b/Administration_Manual_OpenStage_OpenScape_Voice.pdf)
- [4] WPI Guide (http://wiki.siemens-enterprise.com/images/c/c7/OpenStage_Provisioning_Interface_Developer%27s_Guide.pdf)

Abbreviations

AoR	Address of Record
MAA	Multiple Address Appearance
MSA	Multiple Station Appearance
MLA	Multiple Line Appearance
SIP	Session Initiation Protocol
UA	User Agent
MWI	Message Waiting Indication
BLA	Bridged Line Appearance
SCA	Shared Call Appearance

About Siemens Enterprise Communications:

Siemens Enterprise Communications is a premier provider of end-to-end enterprise communications solutions that use open, standards-based architectures to unify communications and business applications for a seamless collaboration experience. This award-winning "Open Communications" approach enables organizations to improve productivity and reduce costs through easy-to-deploy solutions that work within existing IT environments, delivering operational efficiencies. It is the foundation for the company's OpenPath commitment that enables customers to mitigate risk and cost-effectively adopt unified communications. This promise is underwritten through our OpenScale service portfolio, which includes international, managed and outsource capability. Siemens Enterprise Communications is owned by a joint venture of The Gores Group and Siemens AG. The joint venture also encompasses Enterasys Networks, which provides network infrastructure and security systems, delivering a perfect basis for joint communications solutions.

For more information about Siemens Enterprise Communications or Enterasys, please visit www.siemens-enterprise.com/open or www.enterasys.com

Communication for the open minded

Siemens Enterprise Communications
www.siemens-enterprise.com/open

**©Siemens Enterprise
Communications GmbH & Co. KG**

**Siemens Enterprise
Communications GmbH & Co. KG
is a Trademark Licensee of Siemens AG**

**Hofmannstr. 51
81359 Munich, Germany**

Status 04/2010

The information provided in this brochure contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract. Availability and technical specifications are subject to change without notice. OpenScape, OpenStage and HiPath are registered trademarks of Siemens Enterprise Communications GmbH & Co. KG. All other company, brand, product and service names are trademarks or registered trademarks of their respective holders. Printed in Germany.